



## NETVOX G579

1 LINE NUMERIC POCSAG PAGER

Thank you for choosing the NETVOX G579.

### Tomvic Industries Ltd

Authorised Distributor of Netvox Pagers

PO Box 34634, Birkenhead

13 Sunnyhaven Avenue

Beach Haven Village

Auckland

Ph: (09) 481 9020

Fax: (09) 481 9029

Email: info@tomvic.co.nz


Web: www.tomvic.co.nz

## Getting Started

### Pager Features:

- 1 line, 20 characters per message
- Up to 16 personal message slots
- Locks & protects up to 8 numeric messages
- 2 alarm clocks
- 26 user selectable alerts, vibra-alert, vibrate and music mode (16 random tunes)
- Backlight

### Function Buttons

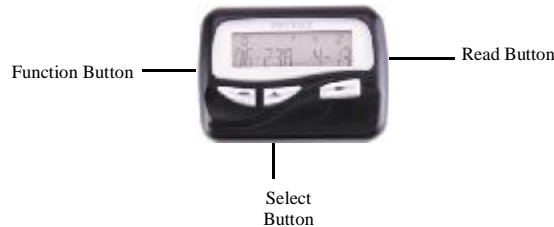

### LCD Display



- |                             |                                  |
|-----------------------------|----------------------------------|
| 1) Message Indicator        | 7) Automatic On/Off Indicator    |
| 2) Alert Mode Indicator     | 8) Message-Lock Indicator        |
| 3) Emergency ID Paged       | 9) Coverage Indicator            |
| 4) Message from RIC 1/2/3/4 | 10) Time Display                 |
| 5) Low Battery Alert        | 11) Morning/Afternoon Indicator  |
| 6) Alarm Indicator          | 12) Continuous Message Indicator |

### Pager On

- Place one AAA alkaline battery into back of pager. (see section in manual - "To install or replace battery").
  - Pager will alert.
  - Press „ to stop alert.
- 
- To turn pager on from off mode: hold ↵ until pager alerts.

### Pager Off

- Press and hold ↵ until pager reads "Set 1 Beep"
- Press ↵ until pager reads "Set 6 OFF"
- Press ~
- Press ~ and hold until pager displays time and OFF

### Time & Date - turn pager on

- Press and hold ↵ for 5 seconds until pager reads "Set 1 Beep"
- Press ↵ and then ~
- Press ↵ to adjust figures (scroll through hours to change AM/PM)
- Press „ to shift to next figure (hour,minute,month,date,week)
- Press ~ to confirm setting

### Alert Settings

- Press and hold ↵ until pager reads "Set 1 Beep"
- Press ~ once to select alert options
- Press ↵ to scroll through alert options
- Press ~ to select alert

### Alert Options:

- ----- Vibrate mode
- Beep 1 10 music alert options
- Beep 2 16 music alert options
- Beep 3 Vibra-alert (vibrate and alert)
- Music 16 random tunes

For Beep 1 & 2: Follow steps above, press ↵ to scroll through alert options under the Beep 1 & 2 headings, press ~ to confirm setting.

### Read a Message

- When a message is received your pager will alert.
- Press „ to read the new message.
- Press „ to read your messages.

## Saving a Message

When 16 messages have been received in the Personal Message Area the next personal message will overwrite the oldest message. Therefore, it is important to save messages that you do not want to be overwritten.

- Display message on the screen
- Press ~ to save the message
- To release the message from being saved press ~ while the message is on the screen

## Alarm Setting Release

- To release alarm 1 or 2 follow steps 1 - 3 to "Set Alarm"
- Then press ,, 3 times
- Press ↵ once
- Press ~ once to release chosen alarm

## Backlight

- Press ~ ONCE (after 8 seconds light will automatically turn off)
- Press ~ to manually turn light off

## Service and Repair

Complete the warranty form enclosed in pager box.

Contact your Paging Dealer or Tomvic Industries Ltd for enquiries for servicing your pager.

### **TOMVIC INDUSTRIES LTD**

PO Box 34634  
Birkenhead  
Auckland  
New Zealand

Ph: (09) 481 9020 Fax: (09) 481 9029  
info@tomvic.co.nz  
www.tomvic.co.nz

## Delete a(II) message(s)

Delete a single message:

- Display the message on the screen
- Press ~ for 2 seconds to delete the message

Delete all messages:

- Press ↵ until pager reads "Set 1 Beep"
- Press ↵ 4 times until pager reads "Set 5 Del"
- Press ~ once
- Press ~ for 2 seconds to delete all messages

## Auto On/Off

1. Press ↵ until pager reads "Set 1 Beep"
2. Press ↵ 2 times until pager reads "Set 3 Auto"
3. Press ~ once
4. Press ↵ once
5. Press ~ once
6. Press ↵ to adjust the figures
7. Press ,, to shift to the next figure (on/off, hour, minute)
8. Press ~ to confirm setting

To release Auto On/Off:

- Complete steps 1 - 5 of the above "Auto On/Off"

## Netvox G579 Paging Accessories

Give your pager added protection and security with the range of PagerMate® accessories.



A large selection of pager pouches are available. These all provide added protection for the pager screen and are splash proof.

For added security PagerMate® has a large range of chains and bungee cords to ensure you won't lose your pager while on the move.



## Set Alarm

First Alarm:

1. Press ↵ for 5 seconds
2. Press ↵ 3 times
3. Press ~ 2 times
4. Press ,, to shift to next figure (hour, minute, on, off)
5. Press ↵ to adjust the figures
6. Press ~ to confirm setting

Second Alarm:

1. Press ↵ for 5 seconds
2. Press ↵ 3 times
3. Press ~ 4 times
4. Complete steps 4 - 6 of first alarm

## To install or replace battery

- Place the pager face down in the palm of your hand
- Release sliding latch and push sideways with a click to unlock the battery cover, slide battery cover along and out
- When replacing batteries turn pager off, remove old battery and replace with new battery. Check polarity is correct
- Place cover on track and move along until cover clicks in place. Push down sliding latch.

**ALWAYS USE AN ALKALINE BATTERY**

## Minicall Pager Number -

Now you can add an additional number to your Netvox pager to give you extra flexibility. The Telecom Minicall numbers mean you have no monthly subscription fee - the person calling the pager pays for the message (99 cents peak, 40 cents off peak). A great solution for people sharing a company pager number and also need to be individually contactable throughout the day by family and friends.

Contact your local dealer or Tomvic Industries for further information.